

## GENERAL SAFETY PRECAUTIONS

1.



Store the test kit in a cool, dry area.

2.



Read all instructions and note precautions before performing the test procedure.

3.



Read the labels on all reagent bottles. Note warnings and first aid information. Read all Material Safety Data Sheets.

4.



Keep all equipment and reagent chemicals out of the reach of young children.

5.

Avoid contact between reagent chemicals and skin, eyes, nose, and mouth.



6.

Wear safety glasses when performing test procedures.



7.



In the event of an accident or suspected poisoning, immediately call the Poison Center phone number in the front of your local telephone directory or call a physician. Additional information for all LaMotte reagents is available in the United States, Canada, Puerto Rico, and the US Virgin Islands from Chem-Tel by calling 1-800-255-3924. For other areas, call 813-248-0585 collect to contact Chem-Tel's International access number. Each reagent can be identified by the four digit number listed on the upper left corner of the reagent label, in the contents list and in the test procedures.

## USE PROPER ANALYTICAL TECHNIQUES


1.



Use test tube caps or stoppers, not your fingers, to cover tubes during shaking or mixing.


2.

Hold dropper bottles vertically upside-down, and not at an angle, when dispensing a reagent. Squeeze the bottle gently to dispense the reagent one drop at a time.

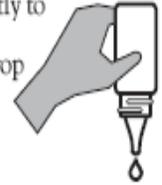


3.

Wipe up any reagent chemical spills immediately.

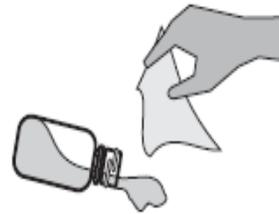

4.

Thoroughly rinse test tubes before and after each test.

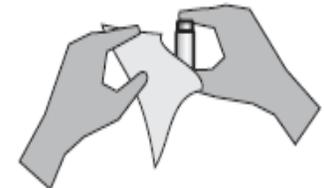

5.



Tightly close all containers immediately after use. Do not interchange caps from containers.

6.



Avoid prolonged exposure of equipment and reagents to direct sunlight. Protect reagents from extremes of temperature.